


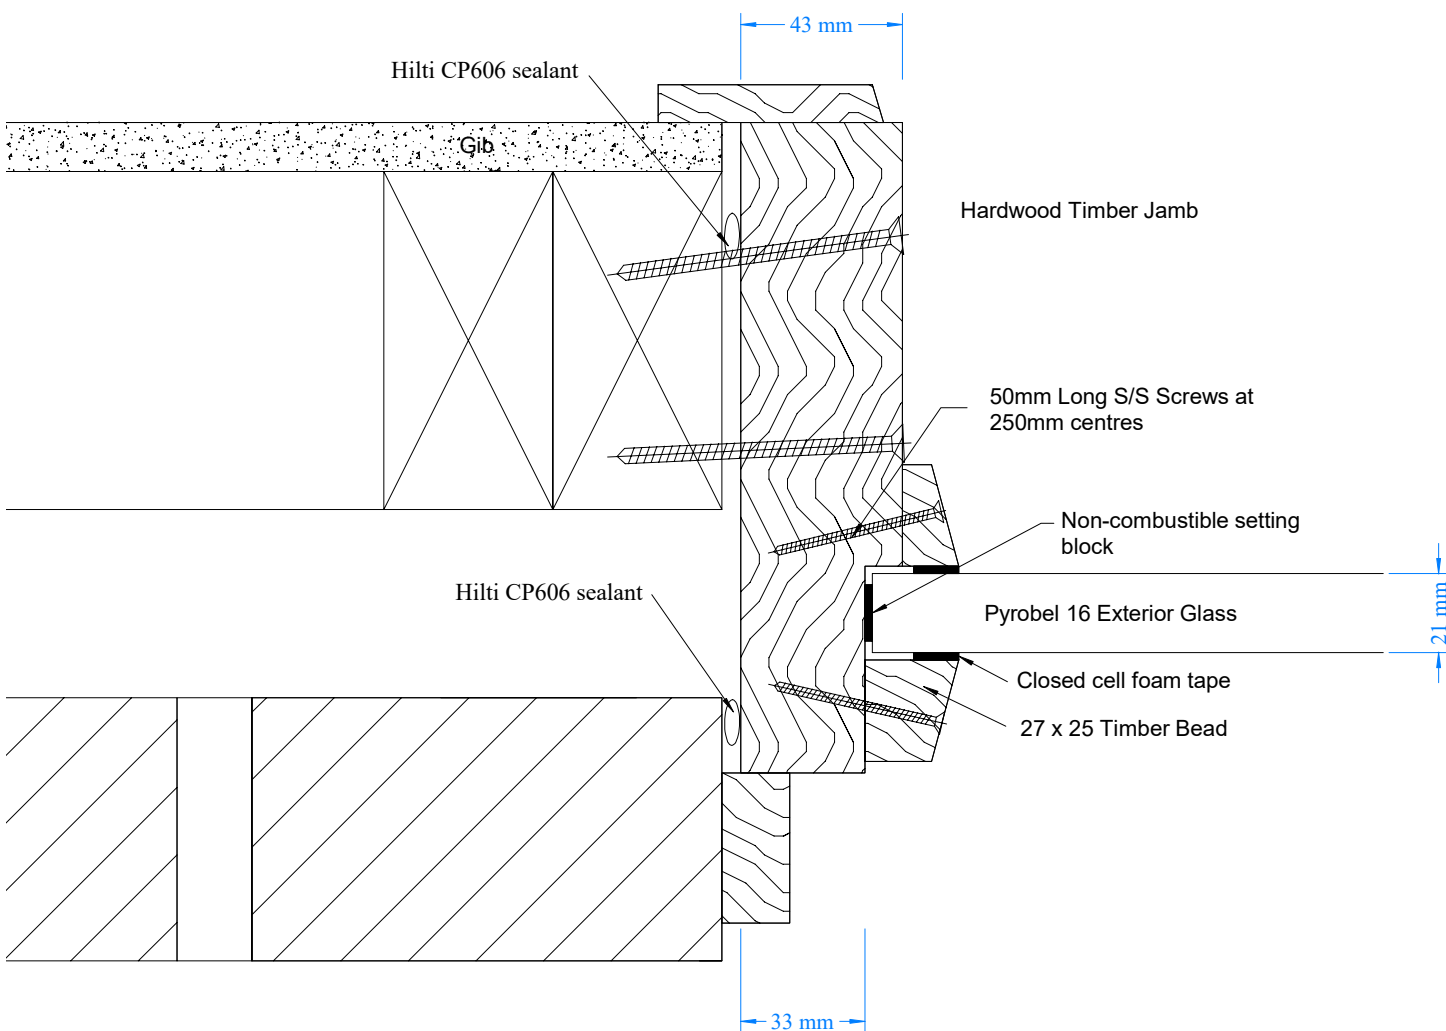

Frame Material

33mm Hardwood Timber

Tolerances

Window frame to timber stud	10mm max
Window frame to Masonry Wall	10mm max

Fixing

Screw fix using 12 gauge anchors at 400mm centres all four sides ensuring 75mm fixing into concrete
Fill wedging gap with Hilti CP606 or equivalent sealant

Follow standard industry practise to make window weather tight. Scribes and facings are not supplied with timber fire windows, but required to make the window weather tight